

Codian MCU

MCU 4200 Series

Getting started

TANDBERG

Codian MCU

MCU 4200 Series

Getting started

Copyright © Codian 2008. All rights reserved. This Getting Started Guide may not be copied, photocopied, translated, reproduced, or converted into any electronic or machine-readable form in whole or in part without prior written approval of Codian Limited.

Codian Limited reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of Codian Limited to provide notification of such revision or change.

Codian Limited provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. Codian Limited may make improvements or changes to the product(s) and/or the program(s) described in this documentation at any time.

All other product and company names herein may be trademarks of their respective owners.

61-0002-05 rev 01

TANDBERG

Philip Pedersens vei 20

1366 Lysaker

Norway

Telephone: +47 67 125 125

Telefax: +47 67 125 234

Video: +47 67 117 777

E-mail: tandberg@tandberg.com

www.tandberg.com

Table of contents

- General information 1
 - About the Multipoint Control Unit (MCU) 1
 - Package contents 1
 - Port and LED location 1
- LED behavior 2
- Connecting the MCU 4
 - Before you start 4
 - Step one: Connect power 4
 - Step two: Connect to Ethernet Port A 4
- Initial configuration 5
 - Step one: Connect to the console port 5
 - Step two: Configure Ethernet Port A settings 5
 - Step three: Assign an IP address to the MCU (optional) 6
 - Step four: Discover the IP address of the MCU 6
- Configuring the MCU 7
 - Step one: Log in to the MCU 7
 - Step two: Using an H.323 gatekeeper or SIP registrar (optional) 7
 - Step three: Add endpoints (optional) 8
- Using the MCU 9
 - Creating conferences 9
 - Calling participants in to a conference 10
 - Calling in to a conference 10
 - Streaming conferences 11
- Instructing conference participants 12
- Checking for updates 12
- Troubleshooting and technical support information 13
 - Using the event log to help solve a problem 13
 - Getting more help 13
- Technical specifications 14
- Anti-static precautions 14

General information

About the Multipoint Control Unit (MCU)

The MCU 4200 Series is a range of technologically advanced and powerful Multipoint Control Units. They are designed to provide high quality voice and video conferencing.

Package contents


The following items are included with the MCU. Verify that you have these items before installing the device:

- ▶ Codian MCU device
- ▶ Console cable (blue)
- ▶ Power cable
- ▶ Rack mounting kit

Port and LED location

Figure 1 shows the position of ports and LEDs on the MCU.

Figure 1: MCU front panel

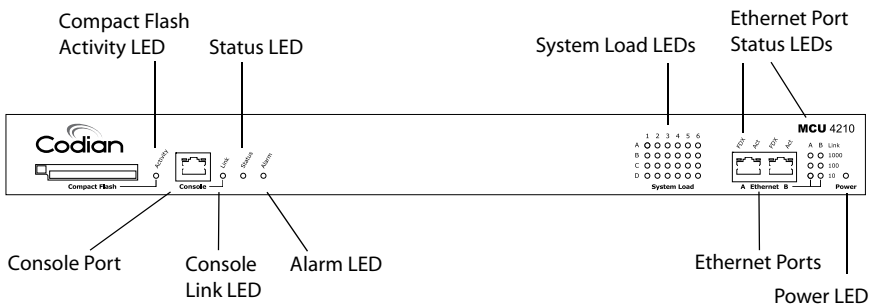

LED behavior

Table 1 describes the behavior of the LEDs.

Table 1: MCU LED behavior

LED	Color	Indicates
Compact Flash Activity	Flashing green	One of: <ul style="list-style-type: none">▶ the MCU is booting▶ a configuration change has been made▶ the configuration is being transferred by FTP
Console Link	Green	A PC is connected to the console port
Status	Green	The MCU is operating normally
Alarm	Red	The MCU is booting or has developed a fault, for example: <ul style="list-style-type: none">▶ temperature is outside normal limits▶ fan failure▶ battery failure of the internal clock Refer to the web interface for more information about the problem (go to Status > Health)
System Load	Green	The MCU is processing conference data. The LEDs represent the media processing load of the MCU. The column numbered 1 represents audio load. The other columns represent video DSP load. Media processing load is also displayed in the web interface: go to Status > General

Table 1: MCU LED behavior (continued)

LED	Color	Indicates
Ethernet Port Status, for each Ethernet port :		
FDX	Green	The link has been negotiated as a full-duplex link
Act	Green	Packets are being transmitted on this port
Link	Green	The speed of the link from this port, which is either 10, 100, or 1000 Mbps
Power	Blue	The MCU is receiving power

Connecting the MCU

Before you start



IMPORTANT: Before installing the MCU, you must read the safety information at <http://www.codian.com/safety.htm>

Step one: Connect power

Connect the power connector on the rear of the unit to the power supply using the supplied power cable. (There is no On/Off switch.)

Step two: Connect to Ethernet Port A

Connect an Ethernet cable from Ethernet Port A to an Ethernet switch (rather than a hub, to minimize interference from other devices on the network). The Ethernet port is a 10/100/1000 Mbps auto-sensing connection



Only connect to Ethernet Port B if you need to connect the MCU to a second subnet.



Do not connect Ethernet Port A and Ethernet Port B to the same subnet.

Initial configuration

Step one: Connect to the console port

- 1 Ensure power is connected to the MCU and the Status LED is green.
- 2 Connect the console port of the MCU to the serial port of your PC using the blue RJ45 to DB9 cable supplied.
- 3 Use a serial terminal program, such as Secure CRT or HyperTerminal, to connect to the MCU. Set your terminal software to the following settings:
 - Baud rate: 38400
 - Data bits: 8
 - Parity: none
 - Stop bits: 1
 - Flow control: none
- 4 Press Enter and the following command prompt appears on the terminal:
MCU:>

Step two: Configure Ethernet Port A settings

The default setting for the MCU Ethernet ports is auto-sensing mode. If the switch ports to which you connect the MCU are not also set to auto-sensing mode, then you need to configure the MCU Ethernet ports to use the same speed and duplex mode.



Only connect to Ethernet Port B if you need to connect the MCU to a second subnet.



Both ends of the Ethernet connection must be configured in the same way. For example, either configure both ends of the link to be auto-sensing or configure both ends to operate at the same speed and duplex.



To establish a 1000Mbps connection, both ends of the link must be configured as auto-sensing.

-
- ▶ To configure Ethernet Port A, enter the following for auto-sensing mode:
etherstype auto
or to configure a speed and duplex, use the following command:
etherstype <10|100> <half|full>
 - ▶ To display the current configuration and status of the Ethernet ports, enter:
status

For example, to configure a full-duplex 100Mbps link, enter:

```
etherstype 100 full
```



To establish a 1000Mbps connection, both ends of the link must be configured as auto-sensing.

Step three: Assign an IP address to the MCU (optional)

The default setting for the MCU is to use DHCP to obtain an IP address. You can assign a static IP address if you prefer or if a DHCP server is not available.

If you want the IP address of the MCU to be assigned by your DHCP server, omit this step.

- ▶ To assign a static IP address, use the following command:
**static <IP address> <netmask> <default gateway address>
<DNS server address>**



If you do not have a DNS server, use 0.0.0.0 as the DNS server IP address.

For example, to assign an address of 192.168.1.2 where the default gateway is at 192.168.1.1, enter:

```
static 192.168.1.2 255.255.255.0 192.168.1.1 0.0.0.0
```

- ▶ To return to using DHCP after setting a static address, use the following command:
dhcp

Step four: Discover the IP address of the MCU

- 1 To display the current status of the IP address, enter: **status**
If you have DHCP enabled on your network and you are allowing the MCU to acquire its address using DHCP, the IP address that has been acquired by Ethernet Port A will be shown; if you have assigned a static IP address, that is the address that will be shown.
- 2 Make a note of the IP address. You will use this to access the web interface of the unit.

Configuring the MCU

Step one: Log in to the MCU

All administration of the MCU is performed via the web interface.

To log in to the web interface of the MCU:

- 1 Use your browser to navigate to the IP address of the MCU (to discover the IP address, refer to the previous section).
- 2 Click the **Log in** link on the top right of the screen, then click **Change log in** and enter the user name **admin** with no password.



Codian recommends that you change the admin account to use a password as soon as possible. To do that, go to **Users**, click the **admin** link, and provide the required user information.

Step two: Using an H.323 gatekeeper or SIP registrar (optional)

If you have H.323 endpoints, using an H.323 gatekeeper can make it easier for participants to call in to a conference. You can configure the MCU to use an external gatekeeper or its own built-in gatekeeper. For information about using the built-in gatekeeper, refer to the online help.

If you have SIP endpoints, using a SIP registrar can make it easier for participants to call in to a conference.

To configure the MCU to use an H.323 gatekeeper:

- 1 In the web interface of the MCU, go to **Settings > Gatekeeper**.
- 2 Enable **H.323 gatekeeper usage** and configure the settings you require, using the online help for further assistance.
- 3 Click **Apply changes**.

To configure the MCU to use a SIP registrar:

- 1 In the web interface, go to **Settings > SIP**.
- 2 Configure the settings you require, using the online help for further assistance.
- 3 Click **Apply changes**.



Before you configure the MCU to use, and register conferences to, a SIP registrar, you must set up the MCU and its conferences on that SIP registrar.

Step three: Add endpoints (optional)

One way to add participants to a conference that you create is to have the MCU automatically call them when the conference starts. To do this, you configure their endpoints on the MCU. When you set up a conference, you can choose the endpoints from the **Pre-configured participants** list. This is easier than entering each endpoint's details every time. Participants that are pre-configured for a conference will automatically be called by the MCU to join that conference.

To define pre-configured endpoints:

- 1 In the web interface of the MCU, go to **Endpoints**:
 - To add a H.323 endpoint, click **Add H.323**
 - To add a SIP endpoint, click **Add SIP**
 - To add a VNC screen, click **Add VNC**
- 2 Configure the endpoint settings you require, using the online help for further assistance.
- 3 Click **Add endpoint**.

Using the MCU

Creating conferences

To create a conference:

- 1 In the web interface of the MCU, go to **Conferences** and click **Add new conference**.
- 2 Type a **Name** for the conference, for example *SalesMeeting*.
- 3 Type an optional numeric identifier, for example **123**. This will be the telephone number that participants can use to join the conference when calling in to the MCU via a gatekeeper or SIP registrar.



There are two types of conference participant: chairperson and guest. IDs and PINs allow participants to connect to conferences as the correct participant type. Chairperson participants use the Numeric ID and optionally, the PIN; guest participants use the Guest numeric ID and optionally, the Guest PIN. For more information, refer to the online help.

- 4 If you are using a gatekeeper, check **H.323 gatekeeper**; if you are using a SIP registrar, check **SIP registrar**.
- 5 Ensure the **Maximum duration** of the conference is sufficient (the default is one hour).
- 6 All other values can be left at their default settings. Refer to the online help for further information about the available settings.



Note that if you do not configure the conference to start immediately, it will become a scheduled conference and will be inactive until its start time.

- 7 Scroll down and click **Add conference**.

The conference you have created is now active (if you used the default immediate start time) and participants can join in one of two ways: either the MCU can call out to specified endpoints or endpoints can dial in. Any endpoints that have been added to a conference, as pre-configured participants, will be called in to the conference by the MCU.

Calling participants in to a conference

To call participants in to a conference:

- 1 In the web interface of the MCU, go to **Conferences** and click on the name of an active conference.
- 2 On the **Participants** tab, click **Add participant** to call out to an H.323 or SIP endpoint.
- 3 In the **Address** field:
 - where there is no H.323 gatekeeper or SIP registrar, type the IP address, host name, or SIP URI of an accessible endpoint on your network
 - if you are using an H.323 gatekeeper, enter the number registered with the gatekeeper for the required endpoint
 - if you are using a SIP registrar, enter the number registered with the SIP registrar for the required endpoint
- 4 Leave the other fields as their default values and click **Call endpoint**. The MCU automatically connects to the endpoint.
- 5 If the endpoint is not configured to automatically answer calls, accept the call on the endpoint.

Calling in to a conference

Participants can call in to conferences in either one of two ways:

- ▶ if you have given the conference a numeric identifier and you are using an H.323 gatekeeper or SIP registrar, tell participants to dial the numeric identifier from their endpoint to join that conference
- ▶ participants can dial the IP address of the MCU to access the auto attendant of the MCU. Participants will see a menu of available conferences on their video screen and will hear instructions

Streaming conferences

Streaming is a way of viewing a conference in a standard web browser. The MCU allows streaming of video and, if enabled for a conference, the streaming of data. You can also conduct a text 'chat' and add notes and drawings to the data stream.



Note that to use the 'chat' facility when streaming a conference, your MCU needs the web conferencing feature key. For more information, refer to your reseller.

You can configure two streaming options on the MCU that will be available for users to choose between when streaming conferences. For each streaming option, you must choose a media player (QuickTime, RealPlayer, or Windows Media Player) and a bit rate.

To configure streaming options:

- 1 In the web interface of the MCU, go to **Settings > Streaming**.
- 2 Configure the streaming options you require, referring to the online help for more details about options.
- 3 Click **Apply changes**.

Streaming users will need to have installed one of the media players that you have chosen for the two streaming options. Streaming users might also need to install Java (from www.java.com).

To stream a conference:

- 1 In a web browser, go to the IP address of the MCU (or if you are already logged in, go to **Home** and click **Streaming-only interface**).
- 2 Type in a **Sign-in name** (the name by which you will be identified if you 'chat') and the **Conference ID** (the numeric identifier of the conference).
- 3 Click **Stream this conference** and streaming will start.

Instructing conference participants

You need to tell conference participants how to join conferences. You can also tell them how to use the Far-End Camera Controls (FECC) to navigate menus in the auto attendant and choose conference layouts. There is a document: *Getting Started: Accessing Conferences* available in the documentation area of the web site, which you can print out and give to conference participants.

Checking for updates

It is a good idea to regularly check for updates to the main MCU software image. This section describes how to upgrade the MCU using the web. Note that you can also upgrade the MCU using FTP; this can be more reliable if you are upgrading the device remotely. Upgrading your device via FTP is described in the release notes that are available alongside the software images in the support section of the web site.

To check for, and download, updates:

- 1 Log in to the MCU web interface and go to **Status > General**.
- 2 Make a note of the software version that is currently installed.
- 3 Go to the support section of the web site and check if a more recent release is available for the MCU.
- 4 If a more recent release is available, download it and save it locally.

To upgrade the MCU:

- 1 Unzip the software release file that you downloaded.
- 2 In the MCU web interface, go to **Settings > Upgrade**.
- 3 In the **Main software image** section, click **Browse** and locate the unzipped file.
- 4 Click **Upload software image**. The browser begins uploading the file to the MCU, and a new browser window opens to indicate the progress of the upload. When finished, the browser window refreshes and indicates that the software upgrade is complete.
- 5 Go to **Settings > Shutdown** to shut down and restart the MCU.



Note that shutting down the MCU will disconnect all participants.

Troubleshooting and technical support information

Using the event log to help solve a problem

Unless you are experiencing a problem, all event logging sources should be set to the default, which is **Errors, warnings and information**. For more information about configuring the event log, refer to the online help accessible from the web interface.

You can use the event log to produce debugging information to assist technical support in solving your problem. However, we recommend that you only alter the setting of the event log under the guidance of technical support. In particular, you should not turn on event logging sources without good cause or advice from technical support.

Getting more help

If the documentation does not answer your question or you have a problem with one of our products:

- 1 Refer to the Technical FAQ section of the web site. We keep the Technical FAQ section up to date with the latest information from our technical support team regarding the resolution of customer issues.
- 2 Contact your reseller. Our resellers have a wealth of experience with our products and this is often a quick way of solving a problem.
- 3 If your query remains unsolved, there is a web form in the support area of the web site that you can complete. Ensure that you provide all the details requested by the form to assist the technical support team in resolving your problem:
 - the serial number and product model number (for example: MCU 4210) of the unit
 - the software build number (to find this, in the web interface, go to **Status > General**)
 - where you purchased the unit
 - your contact email address or telephone number

Technical specifications

Power requirements

Table 2: MCU ratings

Rating	Value
Nominal voltage	115V to 230V 50/60 Hz
Current rating	2A Maximum
Supply voltage range	100 to 240V 50/60 Hz

Over-current protection

Ensure the supply to this unit is protected by a branch circuit protector rated by a maximum of 20A.



Caution — over-current devices must meet applicable national and local electrical safety codes and be approved for the intended application.

Operating environment

The MCU must only be used within the following environmental conditions:

Table 3: Operating environment

Environment	Temperature	Humidity
Operating environment	0°C to 35°C	10% to 95% (non-condensing)
Non-operating environment	-10°C to 60°C	10% to 95% (non-condensing)
Optimum operating environment	21°C to 23°C	45% to 50% (non condensing)

Anti-static precautions

When servicing or removing components or connections, first attach an anti-static wrist strap to an appropriate earth point.

